

# 2.4G LoRa DTU

## USR-DR124

User Manual



**Be Honest & Do Best**

Your Trustworthy Smart Industrial IoT Partner

|   |    |
|---|----|
| 1. Product Introduction .....                         | 3  |
| 1.1. Product features .....                           | 3  |
| 1.2. Application scenarios .....                      | 3  |
| 2. Basic parameters of the equipment .....            | 4  |
| 2.1. Specifications and parameters .....              | 4  |
| 2.2. Hardware interface description .....             | 4  |
| 3. Equipment function introduction .....              | 6  |
| 3.1. Function overview .....                          | 6  |
| 3.2. Mode details .....                               | 8  |
| 3.2.1. Transparent data transfer .....                | 8  |
| 3.2.2. Broadcast data transmission .....              | 9  |
| 3.2.3. Fixed-point data transmission .....            | 10 |
| 3.2.4. Master slave data transfer .....               | 12 |
| 3.2.5. Relay network transmission .....               | 13 |
| 3.3. Other functions are detailed .....               | 17 |
| 3.3.1. LoRa signal detection .....                    | 17 |
| 3.3.2. Additional data transfer .....                 | 18 |
| 3.3.3. LBT check .....                                | 19 |
| 3.3.4. Data retransmission .....                      | 20 |
| 3.4. Remote configuration .....                       | 20 |
| 3.4.1. Specify node configuration .....               | 20 |
| 3.4.2. Search configuration .....                     | 21 |
| 3.4.3. Use of remote AT commands .....                | 22 |
| 3.4.4. Remote parameter ranges can be set .....       | 22 |
| 3.5. Factory default parameters .....                 | 23 |
| 3.6. Firmware upgrade .....                           | 23 |
| 4. Introduction to Upper Computer Configuration ..... | 24 |
| 5. AT Command .....                                   | 25 |
| 5.1. AT command order mode .....                      | 25 |
| 5.2. AT Command Error Codes .....                     | 26 |
| 5.3. AT Command Format .....                          | 26 |
| 6. Common Problems .....                              | 28 |
| 6.1. Unideal Transmission Distance .....              | 28 |
| 6.2. Equipment Damage .....                           | 28 |
| 6.3. Slow Data Transmission Speed .....               | 28 |
| 6.4. Interference in Data Transmission .....          | 28 |
| 7. Disclaimer .....                                   | 29 |
| 8. Update History .....                               | 29 |

## 1. Product Introduction

USR-DR124 is a new generation LoRa wireless data transmission DTU developed based on Sx128x chip. It has high cost performance, high anti-interference and stability. Its working frequency band is 2.4-2.5GHz (default frequency 2.4GHz), operating range 8-24V; it can support point-to-point, point-to-multipoint use, RS485 serial port output.

### 1.1. Product features

- ◆ A new LoRa spread spectrum modulation technology based on Sx128x chip.
- ◆ Lipstick size, small size, guide rail installation.
- ◆ Pass-through transmission, fixed point, master slave transmission, applicable to a variety of transmission scenarios.
- ◆ Supports relay data transfer.
- ◆ Supports FLRC/LoRa modulation for high and low speed, medium and long distance transmission.
- ◆ High power transmission, 12/27dBm optional, up to 5-8 km.
- ◆ 2.4GHz unlicensed frequency band, supporting 2.4GHz-2.5GHz frequency band.
- ◆ Modbus is transparent, simple to use.
- ◆ Remote configuration parameters, support the application of the upper computer, instructions to wireless configuration of remote devices.
- ◆ LORA signal monitoring, indicator light display, can display the signal quality in data transmission and whether there is interference in the use frequency band, to ensure the stability of equipment transmission.
- ◆ The LBT function detects the channel environment interference noise before sending data, delays the transmission of noise when detected, prevents channel conflict, and ensures the success rate of equipment data communication.
- ◆ Data retransmission, data transmission interaction response mechanism, no response to retransmission, to ensure the reliability of data transmission.
- ◆ Data transmission encryption to improve the confidentiality of user data.
- ◆ The hardware watchdog function is carefully designed to prevent equipment downtime and abnormal occurrence, and can be quickly restarted and restored.

### 1.2. Application scenarios

- ◆ Wireless smart metering industry
- ◆ Wireless control of smart street lights
- ◆ Smart agricultural system, intelligent irrigation remote control
- ◆ Smart site equipment monitoring, tower crane operation status monitoring
- ◆ Smart oil field, oil well condition monitoring
- ◆ Smart home and industrial sensors
- ◆ Power distribution cabinet power detection, computer room monitoring
- ◆ Intelligent building energy monitoring

## 2. Basic parameters of the equipment

### 2.1. Specifications and parameters

| Category            | Specification Parameters | Parameter Range   |
|---------------------|--------------------------|---|
| Wireless Parameters | Wireless Solution        | Sx128x  |
|                     | Modulation Mode          | LoRa/FLRC   |
|                     | Operating Frequency Band | 2.4GHz-2.5GHz   |
|                     | Transmission Power       | USR-DR124-27: 27±1dBm<br>USR-DR124-12: 12±1dBm  |
|                     | Receiver Sensitivity     | -140dBm @0.268Kbps  |
|                     | Operating Mode           | Point-to-point, point-to-multipoint transmission  |
|                     | Transmission Distance    | Sunny, open environment, antenna gain 3dBi, height > 2m<br>27dBm maximum distance: 8000m @rate 1<br>12dBm maximum distance: 5000m @rate 1 |
| Hardware Parameters | Serial Port              | RS485: 1200bps - 921600bps  |
|                     | Operating Voltage        | 8V ~ 24V , 12V recommended  |
|                     | Operating Current        | Transmitting current: 45mA @12V;<br>Receiving current: 11mA @12V  |
|                     | Weight                   | 34g   |
|                     | Operating Temperature    | -40°C ~ +85°C   |
|                     | Operating Humidity       | 10~90%RH(no condensation)   |
|                     | Antenna Option           | SMA antenna connector<br>(external thread, internal hole)<br>with rod antenna   |
|                     | Watchdog                 | Built-in hardware watchdog  |

### 2.2. Hardware interface description

❖ This is explained as follows:

| Name              | Function Description                                      | Remarks  |
|-------------------|---|--|
| Antenna Interface | SMA antenna connector<br>(external thread, internal hole) |  |
| Reload            | Factory reset button                                      | When the LoRa data transmission terminal is in normal working state (Work light flashes normally), press and hold for 3-15 seconds or more, then release. You can observe the TXD light flash once, which means the setting parameters of the LoRa data transmission terminal are restored to the factory configuration. |
| Power Interface   | Terminal power supply                                     |  |
| RS485             | RS485 : A (+) \ B (-) \ G (GND)                           | Connect to 485 serial port devices, A connects to A, B connects to B   |

### Instructions for indicator lights

| Name  | Function Description     | instruction   |
|-------|--------------------------|---|
| POWER | Power indicator          | Illuminates steadily when the power input is correct.   |
| WORK  | Working indicator        | Blinks with a 2-second cycle during normal operation; stays on after network access.  |
| COM   | Serial data indicator    | Red and green lights blink alternately when there is serial data communication (red for TX, green for RX) during data transmission.   |
| LINK  | Signal quality indicator | <p>Indicator for LORA and FLRC signals:</p> <p>Red: For LORA modulation mode, blinks according to signal quality (judged by SNR and RSSI values) in three states: Steady on for excellent signal; blinks every 1 second for good signal; blinks every 3 seconds for poor signal.</p> <p>Green: For FLRC modulation mode, blinks according to signal quality (judged by SNR and RSSI values) in three states: Steady on for excellent signal; blinks every 1 second for good signal; blinks every 3 seconds for poor signal.</p> |

### ❖ External dimensions



### 3. Equipment function introduction

#### 3.1. Function overview

| functional                                     | Equipment functions                | Data transfer format                   | Function description  |
|--|------------------------------------|--|---|
| Data transfer mode                             | Transparent transmission           | Data                                   | Data  |
|  | broadcast transmission             | Data                                   | Data<br>(The address of the broadcast equipment is 65535)   |
|  | Fixed-point transmission           | address + channel+Data                 | The transmitted data can be flexibly selected for target receiving devices  |
|  | Master to slave transmission       | address + Data                         | Master and slave transmission   |
| Intermediate network                           | relay transmission                 | Data                                   | Relay network, data transmission, improve the transmission distance   |
| Multi-channel transmission stability mechanism | LBT check                          | \                                      | Check whether there is interference in the frequency band before sending data                                     |
|  | Data retransmission                | \                                      | Start the response mechanism and resend the data after loss   |
|  | forward error correction           | \                                      | When the signal to noise ratio is low or the bit error rate is high, improve the correctness of data transmission |
|  | Overtime restart without data      | \                                      | If the data is not sent and received within the specified time, it will restart                                   |
| LORA, Signal detection                         | Channel environment detection      | Device serial port output : SNR 、 RSSI | A single device detects whether there is interference in the current frequency band                               |
|  | Data transmission signal detection | Output at the receiver : Data+SNR\RSSI | Data is transmitted between devices, and the received data carries signal values for output                       |

|                |                                 |   |  |
|----------------|---------------------------------|---|--|
|                | Link Signal indicator           | The data transmission indicator shows the RSSI signal quality and intuitively feels the LORA signal situation | Indicator for LORA and FLRC signals:<br>Red: For LORA modulation mode, blinks according to signal quality (judged by SNR and RSSI values) in three states: Steady on for excellent signal; blinks every 1 second for good signal; blinks every 3 seconds for poor signal.<br>Green: For FLRC modulation mode, blinks according to signal quality (judged by SNR and RSSI values) in three states: Steady on for excellent signal; blinks every 1 second for good signal; blinks every 3 seconds for poor signal. |
| Other features | Remote configuration parameters | Host machine/instruction configuration  | Specify node configuration   |
|                | Data transmission success sign  | SEND OK   | The sender sends the data, and the receiver receives the data, SEND OK   |
|                | Additional data transfer        | Send : Data<br>Receive : Node ID+Data<br>Or<br>Node ID+Data+SNR+RSSI  | The receiver selects the additional data type  |
|                | LoRa, data packetization        | \   | Wireless data is output in packets of selected size  |

### 3.2. Mode details

#### 3.2.1. Transparent data transfer

##### ❖ function declaration


The transparent transmission protocol means that the transmission process of data does not affect the content of data, and the sent is the same as the received. Under the transparent transmission mode, two or more devices can maintain the same modulation mode, working frequency band, communication rate and communication address to achieve wireless data transmission without other operations.

##### ❖ Equipment setup

###### (1) parameter setting :

- a. Multi-transport mode: the sender and receiver select transparent transport
- b. Modulation mode: The transmitter and receiver select the same modulation mode
- c. Communication frequency band: Set the same frequency band
- d. Communication rate: Set the same rate
- e. Target address: Set the same target address

###### (2) Host computer software usage and Settings:

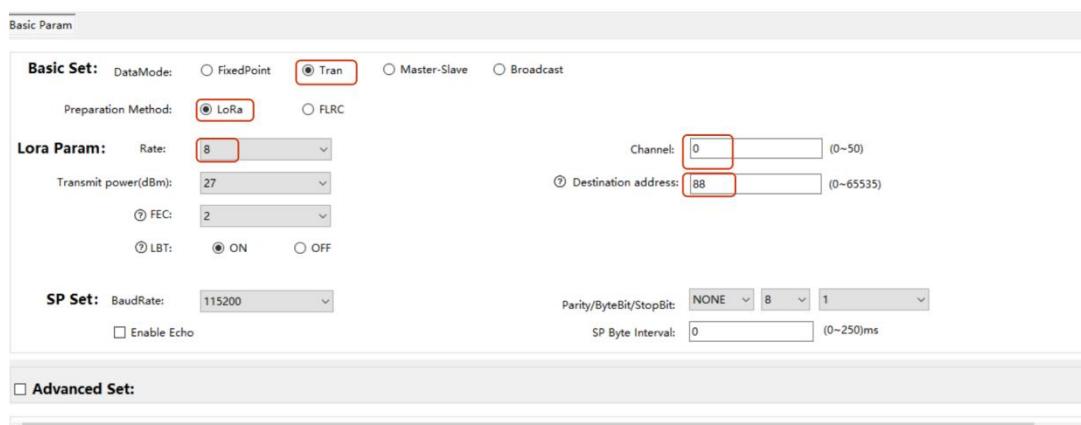

##### ❖ Communication example

| Setup items              | Send                 | receive              |
|--------------------------|----------------------|----------------------|
| function                 | transmission (TRANS) | transmission (TRANS) |
| modulation mode          | LoRa                 | LoRa                 |
| frequency                | 0 ( 2.4GHz)          | 0 ( 2.4GHz)          |
| Rate                     | 8                    | 8                    |
| destination address      | 88                   | 88                   |
| <b>data transmission</b> | 123456               | 123456               |

### 3.2.2. Broadcast data transmission

#### ❖ Function declaration


In the device broadcast function, both the transmitting and receiving modes of the wireless LAN should be selected as broadcast. Any data sent by one party can be received by other devices.

#### ❖ Equipment setup

##### (1) parameter setting :

- a. Multi-transmission mode: The sender and receiver select broadcast
- b. Modulation mode: The transmitter and receiver select the same modulation mode
- c. Communication frequency band: The communication equipment is set in the same frequency band
- d. Communication rate: The communication equipment is set at the same rate

##### (2) Host computer software usage and Settings:

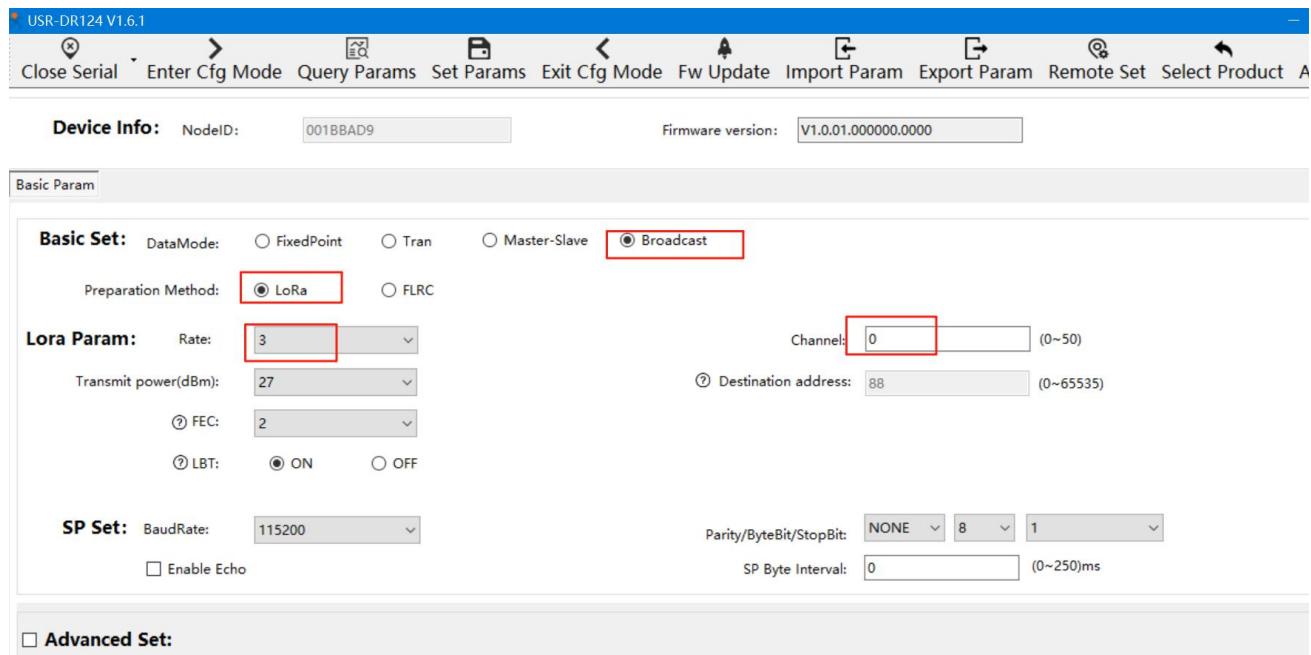

#### ❖ Communication example

| Setup items              | Send        | receive     |
|--------------------------|-------------|-------------|
| Data transmission mode   | broadcast   | broadcast   |
| Modulation mode          | FLRC        | FLRC        |
| Frequency band           | 0 ( 2.4GHz) | 0 ( 2.4GHz) |
| Rate                     | 3           | 3           |
| <b>Data transmission</b> | 123456      | 123456      |

### 3.2.3. Fixed-point data transmission

#### ❖ Function declaration

The fixed-point transmission protocol enhances transparent transmission by using the first two bytes of transmitted data as the destination address (high byte first) and the third byte as the channel identifier. The data format follows this pattern: Destination Address (16-bit) + Channel Identifier (16-bit) + Data. During transmission, the device dynamically modifies these parameters and reverts them after completion. This protocol's key advantage lies in its ability to flexibly adjust destination addresses and channels during data transmission, enabling seamless configuration changes for target modules.

#### ❖ Equipment setup

##### (1) parameter setting :

- a. Data transmission mode: The sending and receiving ends set the data transmission mode to fixed-point mode;
- b. Modulation mode: The transmitter and receiver select the same modulation mode;
- c. Communication frequency band: There is no limit to the frequency band set by the communication mode equipment;
- d. Communication rate: The communication equipment is set at the same rate;
- e. Target address: unlimited communication equipment, according to the target address of the receiving end (16 hexadecimal) + the channel of the receiving end (16 hexadecimal) + Data to send data.;

## (2) Host computer software usage and Settings:

transmitting terminal :

Receiving terminal :

## ❖ Communication example

| Setup items              | sending          | receiving        |
|--------------------------|------------------|------------------|
| Data transmission mode   | fixed point (FP) | fixed point (FP) |
| Modulation mode          | FLRC             | FLRC             |
| Frequency band           | 2 ( 2.404GHz)    | 3 ( 2.406GHz)    |
| Rate                     | 4                | 4                |
| Address                  | 88               | 66               |
| <b>Data transmission</b> | 004203123456     | 123456           |

### 3.2.4. Master slave data transfer

#### ❖ Function declaration


One master and multiple slaves. The master distributes data to the slave devices. The master needs to send data to the slave devices in the group according to the protocol format. The format is: Slave target address (16-bit, 1 byte) +Data. The slave sends data to the master (without following the data transmission protocol, directly sending).

#### ❖ Equipment setup

##### (1) parameter setting :

- Data transmission mode: Set the master-slave mode for the master and slave machines.
- Master-slave machine setup: Select "master" at the master machine end and "slave" at the slave machine end.
- Modulation mode: The transmitting and receiving ends should choose the same modulation mode.
- Communication frequency band: The communication module devices should be set to the same frequency band.
- Communication rate: The communication devices should be set to the same rate.
- Target address: No restrictions on the communication devices.

##### (2) Host computer software usage and Settings:

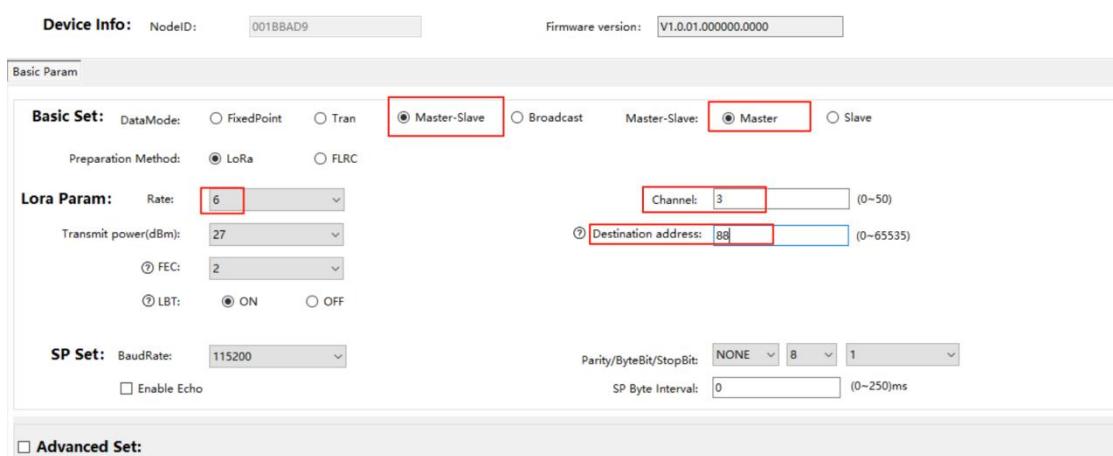

#### ❖ Communication example

| Setting Item                 | Transmitting End    | Receiving End       |
|------------------------------|---------------------|---------------------|
| Data Transmission Mode       | Master - Slave (MS) | Master - Slave (MS) |
| Master - Slave Setting       | Master (1)          | Slave (0)           |
| Modulation Mode              | LoRa                | LoRa                |
| Communication Frequency Band | 3 ( 2.406GHz)       | 3 ( 2.406GHz)       |
| Communication Rate           | 6                   | 6                   |
| Target Address               | 88                  | 66                  |
| <b>Data Transmission</b>     | 0042123456          | 123456              |

### 3.2.5. Relay network transmission

#### ❖ Function declaration

The relay networking function is mainly used to increase the transmission distance and data penetration performance.

After the equipment used in the relay networking is set to relay mode, the relay starts to work.

#### (1) Basic logic of relay networking

**Network terminal:** In the relay network, the device with this mode is set to receive the relay data (same group number and the same target address), and then it will not forward it directly to the serial port. It can be used in the receiving terminal.

**Network relay:** Relay networking equipment needs to be enabled. After network relay, when the receiving device receives LORA and data, it will judge the data protocol byte. If the data is received

If the group number and address in the message match the receiver's own, the device will directly output to the serial port without forwarding. If they don't match, the receiver will check whether the relay group number in the data aligns with the relay forwarding rules. If it does, the data will be forwarded; otherwise, it will be discarded.

The relay function supports three transmission modes: fixed-point transmission, master-slave transmission, and broadcast-through. It transmits data according to the protocol format of each mode. For example, in master-slave mode: the transmitting end is configured as the host mode, while the final receiving end is set as the slave mode.

**Data transmission follows the format:** Slave Target Address (16-bit) + Data. The slave directly sends data to the host without following the data transmission protocol. The relay module then forwards the data according to the relay network transmission logic.

**Group number carried in the data:** After the relay rule is set, the group number is converted according to the relay rule when the receiver receives the data.

**Relay Rule:** When the group number carried in the data received by the receiving end is consistent with the input value in the relay rule, the group number carried in the data will be converted to the output value specified in the relay rule and output as the current group number.

|              |   |
|--------------|---|
| Relay Group: | <input type="text" value="1"/>                                  |
| Relay Rule:  | <input type="text" value="1"/> - <input type="text" value="2"/> |

**Attention:**

- (1) All devices in the relay network must be set to use the same frequency band and data rate.
- (2) Only devices with the relay function enabled can communicate with each other. Devices that can send/receive relay data packets but do not have the relay function themselves can only operate in the network relay mode to acquire relay capabilities.
- (3) Group number, relay rules, and example of target address relationship

| Setup items        | sending end   | Relay 1       | Relay 2       | receiving end    |
|--------------------|---|---------------|---------------|------------------|
| Relay Mode         | network terminal  | Network relay | Network relay | network terminal |
| group number       | 1   | default       | default       | 3                |
| <b>Relay Rules</b> | /   | <b>1-2</b>    | <b>2-3</b>    | /                |
| TargetAddress      | 66  | 77            | 88            | 66               |
| <b>Description</b> | <p><b>Relay 1 Device:</b> Set relay rule 1 - 2. It means: Receive the data sent to group number 1, change the group number to 2, and can transmit the received data from the sending end to the device of Relay 2 (where group number 2 is included in the relay rule).</p> <p><b>Relay 2 Device:</b> Set relay rule 2 - 3. It means: Receive the data of group number 2 from Relay 1, change the group number to 3, and can transmit the received data from Relay 1 to the next device with group number 3.</p> <p><b>Receiving End:</b> Set to network terminal mode. When receiving wireless data with the same target address and the same group number, it will no longer forward, but directly output to the serial port.</p> |               |               |                  |

## ❖ Equipment setup

## (1) parameter setting :

- a. **Data transmission mode:** Both the transmitting and receiving ends select transparent transmission.
- b. **Modulation mode:** The transmitting and receiving ends select the same modulation mode.
- c. **Relay mode:** Turn on the relay switch, and set the relay group number and relay rules with reference to the example of (2) group number, relay rules, and target address relationship.
- d. **Communication frequency band:** The communication modules/devices shall be set to the same frequency band.
- e. **Communication rate:** The communication devices shall be set to the same rate.
- f. **Target address:** The transmitting end device and the relay device shall be set with different target addresses, or set with reference to (1) the basic logic of relay networking and (2) the example of group number, relay rules, and target address relationship; the target address of the receiving end device shall be consistent with that of the previous relay device.

## (2) Software Settings transmitting terminal :

**Basic Param**

**Basic Set:** DataMode:  FixedPoint  **Tran**  Master-Slave  Broadcast

Preparation Method:  **LoRa**  FLRC

**Lora Param:** Rate: **6**  Channel: **0**  (0~50)  
Transmit power(dBm): **27**  Destination address: **11**  (0~65535)  
② FEC: **2**   
② LBT:  ON  OFF

**SP Set:** BaudRate: **115200**  Parity/ByteBit/StopBit: **NONE**  8  1   
Enable Echo  SP Byte Interval: **0**  (0~250)ms

**Advanced Set:**

② DataRetransmission:  Relay Mode: **NetWork terminal**   
DataSuccessDisplay:  ON  OFF Relay Group: **1**   
DataTranInfo:  Relay Rule: **0**  - **1**   
NoDataRestartTimeout: **60**  Remote Scanning Command: **0**  (0~255)

## Relay 1:

**USR-DR124 V1.6.1**

Close Serial Enter Cfg Mode Query Params Set Params Exit Cfg Mode Fw Update Import Param Export Param Remote Set Select Product About

**Device Info:** NodeID: **001BBAD9** Firmware version: **V1.0.01.000000.0000**

**Basic Param**

**Basic Set:** DataMode:  FixedPoint  **Tran**  Master-Slave  Broadcast

Preparation Method:  **LoRa**  FLRC

**Lora Param:** Rate: **6**  Channel: **0**  (0~50)  
Transmit power(dBm): **27**  Destination address: **22**  (0~65535)  
② FEC: **2**   
② LBT:  ON  OFF

**SP Set:** BaudRate: **115200**  Parity/ByteBit/StopBit: **NONE**  8  1   
Enable Echo  SP Byte Interval: **0**  (0~250)ms

**Advanced Set:**

② DataRetransmission:  Relay Mode: **Relay**   
DataSuccessDisplay:  ON  OFF Relay Group: **1**   
DataTranInfo:  Relay Rule: **1**  - **2**   
NoDataRestartTimeout: **60**  Remote Scanning Command: **0**  (0~255)

## Relay 2:

### **Receiving terminal :**

USR-DR124 V1.6.1

Close Serial Enter Cfg Mode Query Params Set Params Exit Cfg Mode Fw Update Import Param Export Param Remote Set Select Product About

**Device Info:** NodeID: 001BBAD9 Firmware version: V1.0.01.000000.0000

**Basic Param**

**Basic Set:** DataMode:  FixedPoint  Tran  Master-Slave  Broadcast

Preparation Method:  LoRa  FLC

**Lora Param:** Rate:  6  12  24  48  96  192  384  768  1536  3072  6144  12288  24576  49152  98304  196608  393216  786432  1572864  3145728  6291456  12582912  25165824  50331648  100663296  201326592  402653184  805306368  1610612736  3221225472  6442450944  12884901888  25769803776  51539607552  103079215088  206158430176  412316860352  824633720704  1649267441408  3298534882816  6597069765632  13194139531264  26388279062528  52776558125056  10555311625112  21110623250224  42221246500448  84442493000896  168884986001792  337769972003584  675539944007168  1351079888014336  2702159776028672  5404319552057344  10808639104114688  21617278208229376  43234556416458752  86469112832917504  172938225665835088  345876451331670176  691752902663340352  1383505805326680704  2767011610653361408  5534023221306722816  11068046442613445632  22136092885226891264  44272185770453782528  88544371540907565056  177088743081815130112  354177486163630260224  708354972327260520448  1416709944654521040896  2833419889309042081792  5666839778618084163584  11333679557236168327168  22667359114472336654336  45334718228944673308672  90669436457889346617344  181338872915778693234688  362677745831557386469376  725355491663114772938752  145071098332622954587752  290142196665245909175504  580284393330491818351008  1160568786660983636702016  2321137573321967273404032  4642275146643934546808064  9284550293287869093616128  18569100586575738187232256  37138201173151476374464512  74276402346302952748928024  148552804692605905497856048  297105609385211810995712096  594211218770423621991424192  118842243754084724398284384  237684487508169448796568768  475368975016338897593137536  950737950032677795186275072  190147590006535559037250144  380295180013071118074500288  760590360026142236149005776  152118072005228447298011552  304236144010456894596023024  608472288020913789192046048  121694457604182757838409296  243388915208365515676818592  486777830416731031353637184  973555660833462062707274368  194711132166692412541454736  389422264333384825082909472  778844528666769650165818944  155768905733353930031637888  311537811466707860063275776  623075622933415720126551552  124615124586683540253102304  249230249173367080506204608  498460498346734161012409216  996920996693468322024818432  199384199338934164449636864  398768398677868328899273728  797536797355736657798547456  1595073594711473315597049012  3190147189422946631194098024  6380294378845893262388196048  12760588757691786524776392096  25521177515383573049552784192  51042355030767146099105568384  102084710061534292198211136768  204169420123068584396422273536  408338840246137168792844547072  816677680492274337585689094144  1633355360984546675171378188288  3266710721969093350342756376576  6533421443938186700685512753152  1306684287876373340137025550632  2613368575752746680274051101264  5226737151505493360548102202528  1045347430301098672108204405056  2090694860602197344216408810112  4181389721204394688432817620224  8362779442408789376865635240448  16725558884817578753731270480896  33451117769635157507462540961792  66902235539270315014925081923584  13380447107854063002850163847168  26760894215708126005700327693336  53521788431416252011400655386672  10704357686283150402280311073344  21408715372566300804560622146688  42817430745132601609121244293376  85634861490265203218242488586752  17126972298053040643644817173504  34253944596106081287289634347008  68507889192212162574579268694016  137015778384424325490158537388032  274031556768848650980317074776064  548063113537697301960634149552128  1096126227075394603921268299104256  2192252454150789207842536598208512  4384504908301578415685073196417024  8769009816603156831370146392834048  17538019633206313666402832785668096  35076039266412627332805665571336192  70152078532825254665611331142672384  140304157065650509311226662285344768  280608314131301018622453324570689536  561216628262602037244906649141379072  1122433256525204074489133298282758144  2244866513050408148978266596565516288  4489733026100816297956533193131032576  8979466052201632595913066386262065152  17958932104403265918265332732524130256  35917864208806531836530665465048260512  7183572841761306367306133093009652024  14367145683322612736612666186019304048  28734291366645225473225332372038608096  57468582733290450946450664744077216192  11493716546658090189290332988814432384  22987433093316180378580665977628866768  45974866186632360757161331955257733536  91949732373264721514322663850515467072  18389946474652944302865337700253934144  36779892949305888605730675400507868288  73559785898611777211461350801015736576  147119571797223554422926701602035473552  29423914359444710884585340320407094704  58847828718889421769170680640814188408  11769565743777884353834136128162837616  23539131487555768707668272256325675232  47078262975111537415336544512651350464  94156525950223074830673089025302700928  188313051900446149661346178050655401856  376626103800892299322692356101310803712  753252207600178548645384712202621607424  150650441320035709729076942440524320448  301300882640071419458153884881048660896  602601765280142838916307769762097321792  1205203530560285677832615539524194643584  241040706112057135566523107904838928768  4820814122241142711330462158096778575376  9641628244482285422660924316193557507152  1928325648884570844521848633238715014304  3856651297769141689043697266477430028592  7713302595538283378087394532954860057184  1542660519107656675617478966589730114368  3085321038215313351234957933179460228736  6170642076430626702469155866358920457472  12341284152861253404938311732778408148944  2468256830572250680987662346555681628988  4936513661144501361975324693111363257976  9873027322289002723950649386222726555952  1974605464457800544780329777244545311904  3949210928915601089560659554489090623808  7898421857831202179121319118978181247616  1579684371566240435824638237855636245232  315936874313248087164927647571127249064  631873748626496174329855295142254498128  126374749725248234865970585284458896256  252749499450496469731941170568917772512  505498998900992939463882341137835544524  1010997997801985878927764682276710885488  2021995995603971757855529364453421770976  4043991991207943515711058728906843541952  8087983982415887031422117457813687083904  1617596796483775406284423591567374416788  3235193592967550812568847183134748833576  6470387185935101625137694366269497667552  1294077437187022325275388873253899533104  2588154874374044650550777746507799066208  5176309748748089301101555493015598132416  1035261949749617860220310986031196264832  2070523899499235720440621972062392529664  4141047798998471440881243944124785059328  8282095597996942881762487888249570118656  1656419119599388576352975777649144237312  3312838239198777152705951555298288474624  6625676478397554305411903110596577749248  13251352956795108610823806221193555588976  26502705913590217221647612442387111177952  53005411827180434443295224884774222355904  10601082365436068886588449768554444671808  21202164730872137773177899533708888943616  42404329461744275546355799067417777887232  84808658923488551092711598134835555774464  16961731784697710218542397626967111548912  33923463569395420437084795253934222597824  67846927138790840874169590507868445956448  13569385427758168158833918101573789191296  27138770855516336317667836203147578382592  54277541711032672635335672406295156651184  108555083422065445270671348125873033303768  217110166844130890541342696251746066607536  434220333688261781082685392503492133215072  868440667376523562165370785006984266430144  1736881334753047124327401570013968532860288  3473762669506094248654803140027937065720576  6947525339012188497309606280055874131441152  1389505067802437699461921256011174826282304  2779010135604875398923842512022349652564608  5558020271209750797847685024044699305292016  1111604054219500159565537004808939861058032  2223208108439000319131074009617879722116064  4446416216878000638262148019235759444232128  8892832433756001276524296038471518888464256  1778566486712002553048592076842837776928512  3557132973424005106097184153685675553857024  7114265946848010212194368307371351107714048  14228531896896020424387366154742702215428096  28457063793792040848774732309485404430856192  56914127587584081697549464618970808861712384  11382825517516816339509892923781617723440768  22765651035033632678019785847563235466815336  45531302070067265356039571695126467033630672  91062604140134530712079143390252934067261344  182125208280269061424158286780505868134522688  364250416560538122848316573561011736268553776  728500833121076245696633147122023473251107552  145700166242152481139326629424404685452215104  291400332484304962278653258848809370904430208  582800664968609924557306517697618741808860416  1165601329372019849114531035392375836177208832  2331202658744039698229062070784751672354417664  4662405317488079396458124141569503344708835328  932481063497615879291624828313890668957746656  186496212695323775858324965662778133791543312  372992425390647551716649931325556267582666244  745984850781295103433299862651112535165332488  149196970156259020686659972530222507032666496  298393940312518041373319945060445014065332992  59678788062503608274663989012088902813066984  119357576125007216549327888024177805626339688  238715152250014433098655776048355611252679376  477430304500028866197311552096711222555358752  954860609000577332394623054193424445106717504  190972121800115466478926020838688889023435008  38194424360023093295785204167737777804670016  76388848720046186591570408335475555609340032  15277769744009237318340817667095111218670064  30555539488018474636681635334190222437340128  61111078976036949273363270668380444874680256  12222215795207389854672654133676088974336052  24444431590414779709345308267352177894672056  48888863180829559418690616534704355578944112  97777726361659118837381232068548711157888224  19555549272331823767462466413709742231577448  39111098544663647534924932827419484463154896  78222197089327295069849865654838968926309792  15644439417865459013889731130967737785269584  31288878835730918027779462261935475560539168  62577757671461836055558924523870951121078336  125155153428923672111178490477409822421556672  250310306857847344222356980955219644843113344  50062061371569468844471396191043928888626688  100121227443138937689542792382087857773253376  200242454886277875378985584764175715546506752  400484909772555750757971169323514310893013504  800969819545111501515942338647028621786027008  1601939639090223023038846677294057243572540016  3203879278180446046077693354588114871455080032  640775855636089209215538670917622954303

## ❖ Communication example

| Setting Item                 | Transmitting End         | Relay 1                                | Relay 2  | Receiving End  |
|------------------------------|--------------------------|--|--|--|
| Data Transmission Mode       | Transparent Transmission | Transparent Transmission               | Transparent Transmission                               | Transparent Transmission   |
| Modulation Mode              | LoRa                     | LoRa                                   | LoRa   | LoRa   |
| Communication Frequency Band | 0                        | 0                                      | 0  | 0  |
| Communication Rate           | 6                        | 6                                      | 6  | 6  |
| Relay Mode                   | Network Terminal         | Network Relay                          | Network Relay  | Network Terminal   |
| Relay Group Number           | 1                        | 1                                      | 2  | 3  |
| Relay Rule                   | /                        | 1 - 2                                  | 2 - 3  | /  |
| Target Address               | 11                       | 22                                     | 33   | 11   |
| Data Transmission            | Send 123456              | Receive 123456 and transmit to Relay 2 | Receive 123456 and transmit to the next - level device | Receive 123456 and no longer transmit; print data to serial port |

### 3.3. Other functions are detailed

#### 3.3.1. LoRa signal detection

##### ❖ function declaration

The signal detection function can, during use, determine whether there is interference in the operating frequency band of the LORA devices deployed on - site and the quality of the output signal during the LORA wireless data transmission process. Based on the signal instructions, it can judge whether the distance arrangement between wireless devices is reasonable; the LoRa signal detection function helps users to a large extent to reasonably select LORA parameters suitable for on - site applications, ensure the stability of data transmission, and save debugging time.

(1) Channel environment detection: Detection for a single device. After enabling this function, the device will read the signal quality in the current environment at 1 - second intervals and output (SNR\RSSI) values through the serial port at 3 - second intervals. Generally, if the RSSI value is lower than - 100dBm and the SNR is lower than 0dB, it means there is interference from other objects in this operating frequency band, and the frequency band needs to be changed for use.


(2) Wireless data transmission signal detection: Requires 2 or more devices to be able to transmit data; after enabling the function, when the device receives data from the transmitting end each time, it will carry the instantaneous (SNR\RSSI) when receiving the data and output it through the serial port after the data. Generally, if the RSSI value is lower than - 110dBm and the SNR is lower than - 5dB, it means that the distance between LORA devices is too far or there are too many obstacles in between. Then, the working rate can be reduced and the distance between devices can be decreased. Note: The FLRC modulation method only supports detecting the RSSI value.

## ❖ Equipment setup

### (1) Parameter Settings:

- a. **Data Transmission Mode:** Select transparent transmission for both the transmitting and receiving ends.
- b. **Modulation Mode:** Select the same modulation mode for both the transmitting and receiving ends.
- c. **Communication Frequency Band:** Set the same frequency band.
- d. **Communication Rate:** Set the same rate.
- e. **Target Address:** Set according to the specified rules of the selected function mode.
- f. **Environment Detection:** Turn on the LoRa signal detection switch and select.

### (2) Software Settings:

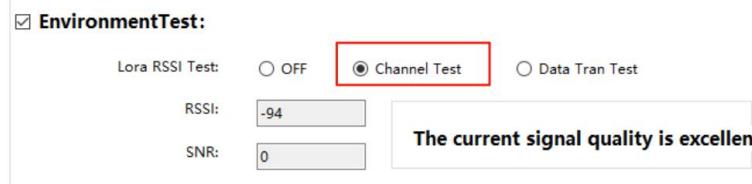

## ❖ Communication example

| Setting Item                    | Channel Environment Detection (Single-device Detection)        | Data Transmission Signal Detection (Detection for 2 or More Devices, Data Transmission Detection) |   |
|---------------------------------|--|---|---|
| Data Transmission Mode          | Transparent Transmission                                       | Transparent Transmission  | Transparent Transmission                                |
| Modulation Mode                 | LoRa   | LoRa  | LoRa  |
| Channel                         | 0  | 0   | 0   |
| Rate                            | 8  | 8   | 8   |
| Target Address                  | 66   | 88  | 88  |
| Environment Detection Selection | Channel Environment Detection                                  | Data Transmission Signal Detection  | Data Transmission Signal Detection                      |
| Data Transmission               | Output (SNR\RSSI) values via serial port at 3-second intervals | Send: 123456  | Receive data and print via serial port: 123456+SNR+RSSI |

### 3.3.2. Additional data transfer

#### ❖ Function declaration


After the additional data transmission function is enabled, when the device receives wireless data, it can add the node ID of the sending device before and after the data frame, or add the node ID, SNR (signal to noise ratio) and RSSI (received signal strength indicator) at the same time, so as to effectively mark the data.

## ❖ Equipment setup

### (1) parameter setting :

- a. Data transmission mode: the sender and receiver select transparent transmission
- b. Modulation mode: The transmitter and receiver select the same modulation mode
- c. Communication frequency band: the same frequency band is set
- d. Communication rate: Set the same rate
- e. Target address: Set the same target address

### (2) Host computer software Settings:

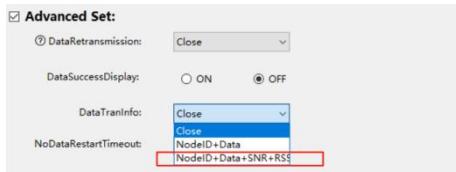

## ❖ Communication example

| Setting Item                 | Transmitting End                 | Receiving End                    |                                  |
|------------------------------|----------------------------------|----------------------------------|----------------------------------|
| Data Transmission Mode       | Point-to-Point                   | Point-to-Point                   | Point-to-Point                   |
| Modulation Mode              | Transparent Transmission (TRANS) | Transparent Transmission (TRANS) | Transparent Transmission (TRANS) |
| Channel                      | 0                                | 0                                | 0                                |
| Rate                         | 10                               | 8                                | 8                                |
| Target Address               | 88                               | 88                               | 88                               |
| Additional Data Transmission | \                                | 1 (Node ID + Data)               | 2 (Node ID + Data + SNR + RSSI)  |
| Data Transmission            | 123456                           | Node ID + Data                   | Node ID + Data + SNR + RSSI      |

### 3.3.3. LBT check

## ❖ function declaration

When using LoRa data transmission, the LBT function is enabled. Before sending data, the ambient noise of the current frequency band is listened to. If the noise exceeds a certain threshold, the data will be sent with delay, which can greatly reduce packet loss and packet error and improve the success rate of data transmission in harsh environment.




### 3.3.4. Data retransmission

#### ❖ function declaration

This critical feature ensures data transmission success in challenging environments by enabling data retransmission. During data transfer, it activates a response mechanism where the sender waits for feedback after transmitting data. Upon receiving confirmation, the transmission is deemed successful. If no response is received within the timeout period, the transmission is considered failed and will be attempted again, with a maximum of three retransmissions allowed.

Note: Retransmission is not supported in relay mode

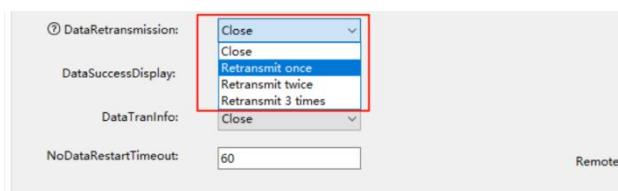


### 3.4. Remote configuration


The wireless remote reading configuration parameter function provides a way to remotely configure and read device parameters through node devices using upper-level computer software and AT instructions. It supports remote search of node configuration and specified node ID configuration, which greatly facilitates the debugging and operation and maintenance of our products.

Note: Configuration end node devices need to operate in instruction mode.

#### 3.4.1. Specify node configuration


To configure a remote specified node through the node ID, you need to configure the parameters of channel and rate.

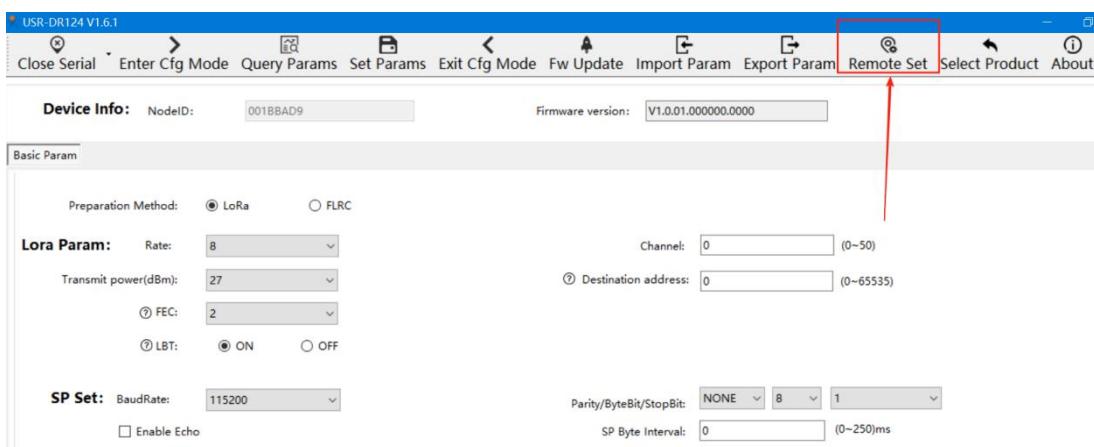

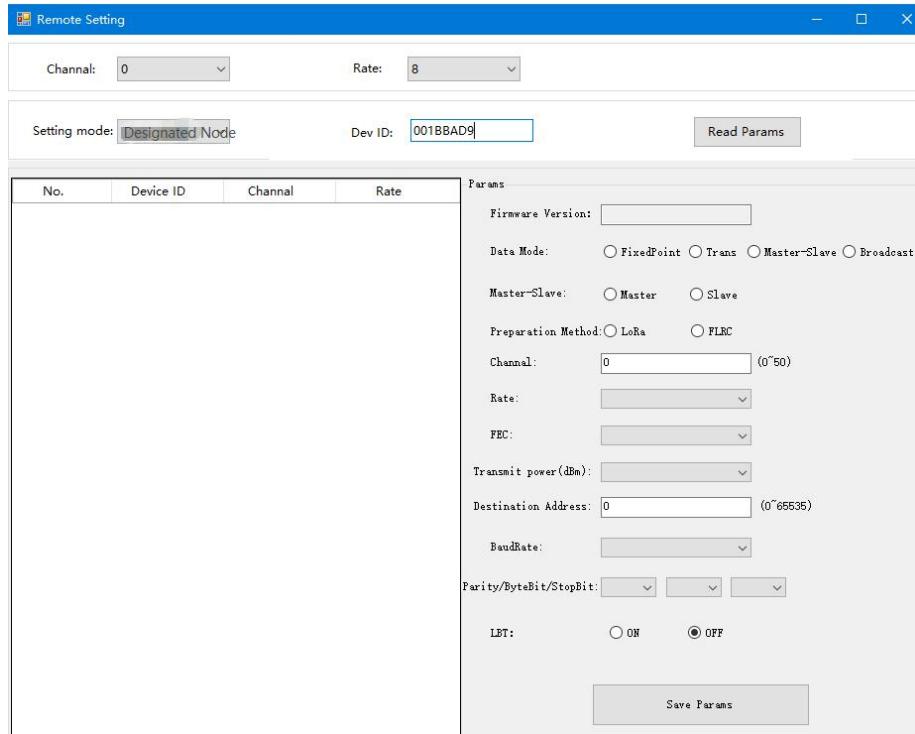

### 3.4.2. Search configuration

When configuring by searching nearby nodes, the configuration terminal searches for discoverable nodes on the same channel and displays these nodes in a list format on the host computer. Users only need to select the target node and configure it through the parameter bar on the right side of the list.

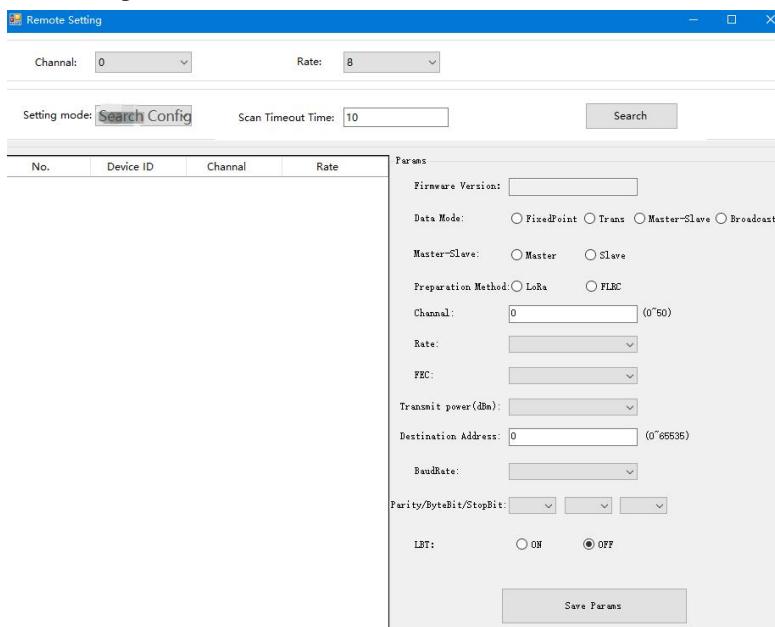

### 3.4.3. Use of remote AT commands

The remote use of AT command setting needs to follow a certain protocol for setting:

- ❖ Scan search devices:

AT+SCANCMD=<CH>,<SPD>{,<timeout>}} Search returns

+SCANCMD:

1,<NID1>,<CH>,<SPD>

2,<NID2>,<CH>,<SPD>

3,<NID3>,<CH>,<SPD>

OK

Parameter definition: <CH> Channel number 0-50; <SPD> Rate level LoRa: 1-8 FLRC: 1-6; <Timeout> Scan timeout, optional parameter, default is 10s, scan time support 10-255, restart invalid.

**Note: The device information is output in sequence, and OK or ERR-5 is returned after the arrival time.**

- ❖ Read specific device

parameters:AT+READCMD=<NID>,<CH>,<SPD>,<#CH#VER#...#>

Device return:

+READCMD:#CH:8#VER:1.0.0.000000.0000#

OK

Parameter definition <NID>: node ID; <CH>: channel number 0-50; <SPD>: rate level LoRa: 1-8 FLRC:1-6; <#CH#VER#...#>: read parameter, support multiple instructions at a time, instructions are separated by #,

the maximum length of response content is 110 bytes.

**Note: The timeout time is 2S**

- ❖ Remote configuration parameters: AT+WRITECMD=<NID>,<CH>,<SPD>,<#CH=8#LBT=1#...#>

Equipment returned : OK

Parameter definition: <NID> Node ID; <CH> Channel number 0-50; <SPD> Rate level LoRa: 1-8;

Parameter content FLRC:1-6;<#CH=8#LBT=1#...#> Parameter content, support setting multiple parameters at a time, command with # interval, content length up to 110 bytes.

**Note: Setting a parameter command requires a restart to take effect. Send the parameter content <#Z#> command and restart the configured device. The timeout time is 2 seconds.**

### 3.4.4. Remote parameter ranges can be set

Supports remote setting of data transmission mode, master and slave machine selection, channel, rate, transmission power, forward error correction, target address, LBT, serial port parameters, etc. The parameter name and setting range can be referenced from the instruction document.


### 3.5. Factory default parameters

| Setting Category        | Setting Function                       | Default Parameter        | Remarks                                     |
|-------------------------|--|--------------------------|---|
| Basic Parameters        | Data Transmission Mode                 | Transparent Transmission | Fixed - point, Master - Slave, Broadcast    |
|                         | Modulation Mode                        | LoRa                     | LoRa, FLRC Optional                         |
|                         | Rate                                   | 10                       |   |
|                         | Channel                                | 0                        | 2.4GHz                                      |
|                         | Transmit Power                         | 27                       | 12, 27; Unit: dBm                           |
|                         | Target Address                         | 0                        | 0 - 65535                                   |
|                         | Forward Error Correction               | Code Rate 4/5 (1)        | 4/6 (2), 4/8 (3)                            |
|                         | LBT                                    | On (ON)                  |   |
|                         | Baud Rate                              | 115200                   |   |
|                         | Parity\Data\Stop                       | n\8\1                    |   |
|                         | Flow Control                           | NFC                      |   |
| Serial Port Settings    | Serial Port Packet Interval            | 10ms                     | Unit: ms, 2 - 250                           |
|                         | Echo                                   | On (ON)                  |   |
|                         | Data Retransmission                    | Off                      | 1 Time, 2 Times, 3 Times                    |
| Advanced Settings       | Data Transmission Carrying Information | Off                      | Node ID + Data; Node ID + Data + SNR + RSSI |
|                         | Restart on Timeout with No Data        | 60                       | Unit: Minute                                |
|                         | Relay Function                         | Off                      | Network Terminal, Network Relay Optional    |
|                         | Remote Scan Command Word               | 0                        | 0 - 255                                     |
| Environmental Detection | LoRa Signal Detection                  | Off                      |   |

### 3.6. Firmware upgrade

#### ❖ Solid state upgrade steps

To configure the LoRa device: 1) Open the settings software (select USR-DR206), 2) Connect to the serial port, 3) Click to enter configuration mode, 4) Manually enter AT+BOOT=1 to activate serial port upgrade mode. Alternatively, set the device's Reload pin to low and power it on to enable serial port upgrade mode. Then follow the steps illustrated in the diagram below, where numbered steps correspond to the following five procedures:

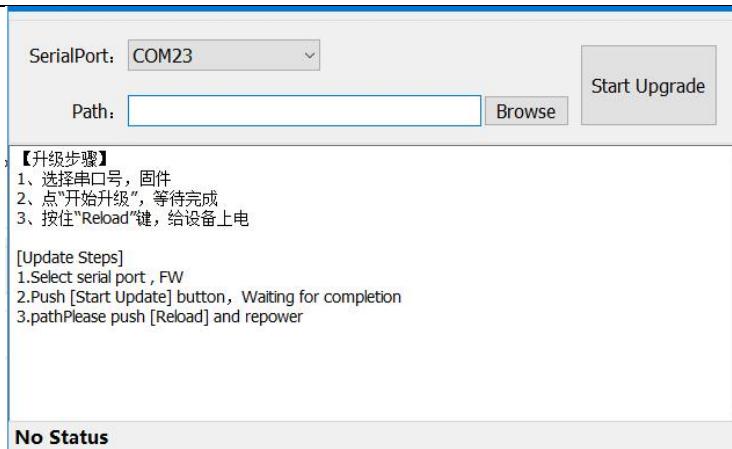

(1) Click "Firmware Upgrade" via the configuration software.

(2) Serial port upgrade may cause parameters to revert to factory settings. If you select "Confirm", follow the prompts to save. After saving, the "Firmware Upgrade" software will pop up automatically; if you select "Cancel", the "Firmware Upgrade" software will open directly.


(3) Select the corresponding serial port.

(4) Open the provided upgrade firmware (\*.hex).

(5) Click "Download" and wait for the download to complete.

#### 4. Introduction to Upper Computer Configuration

This supporting configuration software is applicable for parameter reading and configuration of USR - DR124. First, open the configuration software, select USR - DR124 to enter the configuration interface, and then operate according to the following steps (the serial numbers in the figure correspond to the following 5 steps in sequence):

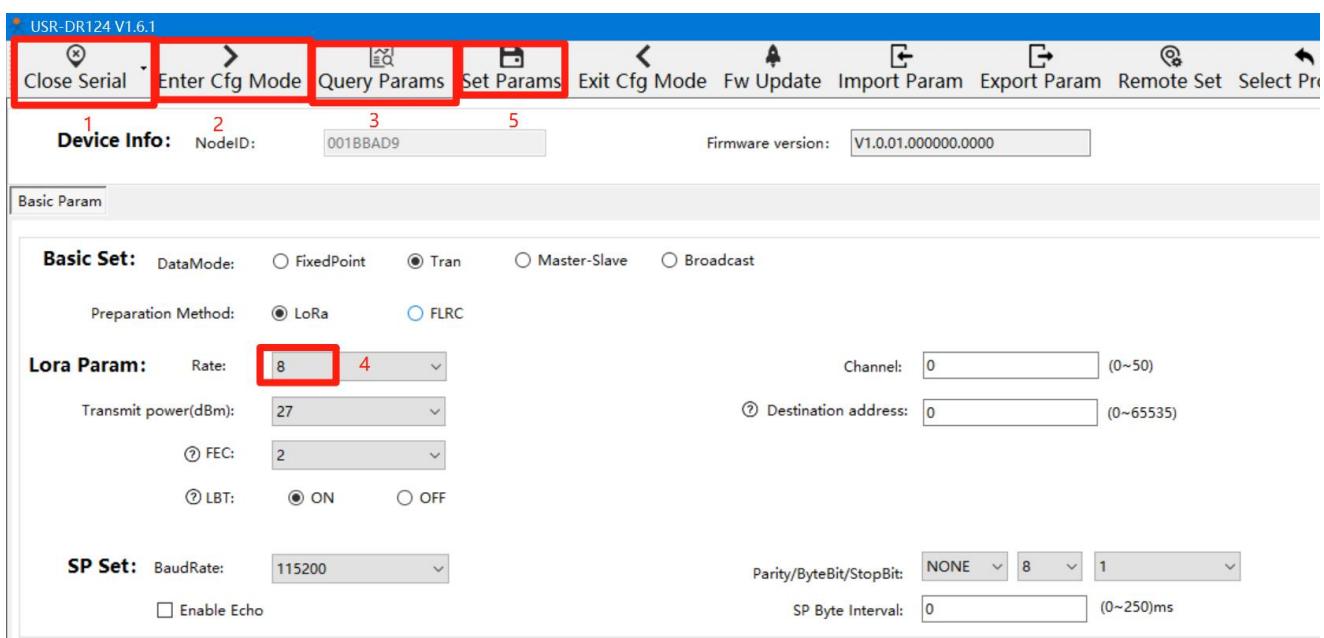

(1) Click the serial port configuration button in the drop - down menu of the “Open Serial Port” button, select the serial port connected to the node, and set the baud rate, parity bit, data bit, and stop bit to the parameters corresponding to the node. The default parameters of the node serial port are 115200, NONE, 8, 1. Click the “Open Serial Port” button.

(2) Click the “Enter Configuration Status” button, and the node will reply +OK, meaning the node enters the AT command mode.

(3) Select the point - to - point protocol.

(4) Click the “Read Parameters” button, and the software will automatically read the node parameter information.

(5) You can view and modify the node parameters in the basic parameters.

(6) If you are reading parameters, click the “Exit Configuration Status” button to exit the AT command mode; if you are setting parameters, click the “Set Parameters” button, and the software will automatically set the node parameters. After the setting is completed, the node will restart and the parameters will take effect.

Download address of the supporting configuration software: <https://www.usr.cn/Download/1294.html>

## 5. AT Command

### 5.1. AT command order mode

#### ❖ Enter the configuration command format

After the device is powered on and starts up successfully, if parameter configuration is required, it is necessary to enter the AT command state through UART following a certain procedure. The default UART port parameters of the module are: baud rate 115200, no parity, 8 - bit data bit, 1 - bit stop bit.

The procedure for switching from other modes to the AT command mode is as follows:

(1) Input “+++” on UART. After the module receives “+++”, it will return a confirmation code “a”.

(2) Input the confirmation code “a” on UART. After the module receives the confirmation code, it returns “+OK” for confirmation, and then successfully enters the AT command mode. Note: The module needs to follow the timing sequence requirements as shown in the following figure to enter the command mode.

## 5.2. AT Command Error Codes

| Return Code | Return Description     |
|-------------|------------------------|
| OK          | Response Successful    |
| ERR-1       | Invalid Command Format |
| ERR-2       | Invalid Command        |
| ERR-3       | Invalid Operator       |
| ERR-4       | Invalid Parameter      |
| ERR-5       | Operation Not Allowed  |

## 5.3. AT Command Format

Sending command format: End with carriage return <CR>, line feed <LF>, or carriage return + line feed <CR><LF>

| Type | Command String Format | Description     | Example          |
|------|-----------------------|-----------------|------------------|
| 0    | AT+CMD? <CR><LF>      | Query parameter | AT+VER? <CR><LF> |
| 1    | AT+CMD <CR><LF>       | Query parameter | AT+VER<CR><LF>   |
| 2    | AT+CMD=para <CR><LF>  | Set parameter   | AT+CH=66<CR><LF> |

Module Reply Format (Echo Disabled)

Setting Parameters: <CR><LF><CR><LF>OK<CR><LF>

Querying Parameters: <CR><LF> +CMD:PARA<CR><LF><CR><LF>OK<CR><LF>

CMD: Command word

PARA: Parameter

#### 5.4. AT Command Set

| Number | Command   | Description   |
|--------|-----------|---|
| 1      | ENTM      | Exit AT command   |
| 2      | E         | Module AT command echo setting  |
| 3      | Z         | Restart module  |
| 4      | CFGTF     | Save current settings as default settings   |
| 5      | RELD      | Restore default settings  |
| 6      | NID       | Query module node ID  |
| 7      | AT+MODEL  | Set/query device model number   |
| 8      | SN        | Query module node SN  |
| 9      | VER       | Module firmware version   |
| 10     | WMOD      | Set/query module working mode   |
| 11     | UART      | Set/query serial port parameters  |
| 12     | UARTFT    | Set/query serial port packet interval time parameter  |
| 13     | RF        | Set/query frequency parameter   |
| 14     | ADDR      | Set/query address   |
| 15     | FEC       | Set/query whether forward error correction is enabled   |
| 16     | POWER     | Set/query transmit power  |
| 17     | CSQ       | Set/query signal detection  |
| 18     | ENC       | Set/query encryption switch   |
| 19     | AT+ENCKEY | Set data encryption key   |
| 20     | SENDOK    | Set/query transmission completion reply flag  |
| 21     | RFTM      | Set/query timeout for module LoRa data communication to restart frequency hopping                     |
| 22     | AT+LOG    | Set/query log switch  |
| 23     | LBT       | Set/query whether to enable channel status function before sending (currently detected by LBT method) |
| 24     | SCANCMD   | Remote search device command  |
| 25     | READCMD   | Remote parameter reading command  |
| 26     | WRITECMD  | Remote parameter setting command  |
| 27     | SCANWORD  | Set/query data retransmission function  |
| 28     | RESEND    | Set/query data retransmission function  |
| 29     | DMOD      | Set/query additional data transmission function   |
| 30     | LORACSQ   | Query/set environment detection   |
| 31     | RFTO      | Query/set no - data restart function  |
| 32     | RELAY     | Query/set relay function switch   |
| 33     | RELAYGID  | Query/set device group ID for relay function  |
| 34     | RELAYRULE | Query/set relay function rules  |

## 6. Common Problems

### 6.1. Unideal Transmission Distance

- ◊ If the antenna is placed inside a metal shell or in a basement, the signal will be attenuated, resulting in a short signal distance.
- ◊ When there are too many obstacles for straight - line communication, the communication distance will be attenuated.
- ◊ Heavy fog or rainy days will affect signal transmission, leading to a high communication packet loss rate.
- ◊ Testing near the ground has poor results. Generally, it needs to be at least 2 meters above the ground.
- ◊ If the rate is set too high, the spreading factor and bandwidth will be inappropriate, and the distance will be short.
- ◊ Poor matching between the antenna and the module or poor antenna gain will lead to a short communication distance.

### 6.2. Equipment Damage

- ◊ Before use, be sure to check whether the power supply meets the recommended power supply. If it exceeds the maximum value, it may burn out the equipment.
- ◊ During installation and use, pay attention to the equipment's anti - static protection to prevent damage during some high - frequency periods.
- ◊ The stability of the power supply. Try to reduce fluctuations. If the fluctuation is large, it may cause damage in the short term.
- ◊ Unless necessary, do not use it in an environment with extremely low temperature. Also, pay attention to short circuits caused by water accumulation and corrosive gases.

### 6.3. Slow Data Transmission Speed

- ◊ If the used rate is too low, the lower the rate, the slower the transmission speed, and the longer the transmission distance; conversely, the higher the rate, the faster the transmission speed, and the relatively shorter the transmission distance.
- ◊ Using a serial port with a low baud rate results in slow data transmission.

### 6.4. Interference in Data Transmission


- ◊ There are other devices with the same frequency band nearby. Change the communication channel or stay away from the interference source.
- ◊ Poor antenna feeder and extension line quality lead to errors in signal transmission.
- ◊ Large - scale noise is generated on the bottom board, interfering with data reception.
- ◊ The power supply setting is unreasonable and does not meet the regulations, resulting in garbled codes.

## 7. Disclaimer

This document provides information about our company's LoRa series products. This document does not grant any intellectual property license, and does not grant any intellectual property license, either expressly or impliedly, or by way of prohibited statement or otherwise. Except for the liabilities stated in the sales terms and conditions of its products, our company shall not be liable for any other liabilities. Moreover, our company makes no express or implied warranties regarding the sale and/or use of this product, including no warranties for the suitability for a specific purpose of the product, merchantability, or liability for infringement of any patent right, copyright, or other intellectual property rights. Our company may modify the product specifications and product descriptions at any time without further notice.

## 8. Update History

| Firmware Version | Update Content  | Update Time |
|------------------|-----------------|-------------|
| V1.0.0           | Initial Release | 2025-08-25  |
|                  |                 |             |
|                  |                 |             |
|                  |                 |             |
|                  |                 |             |
|                  |                 |             |

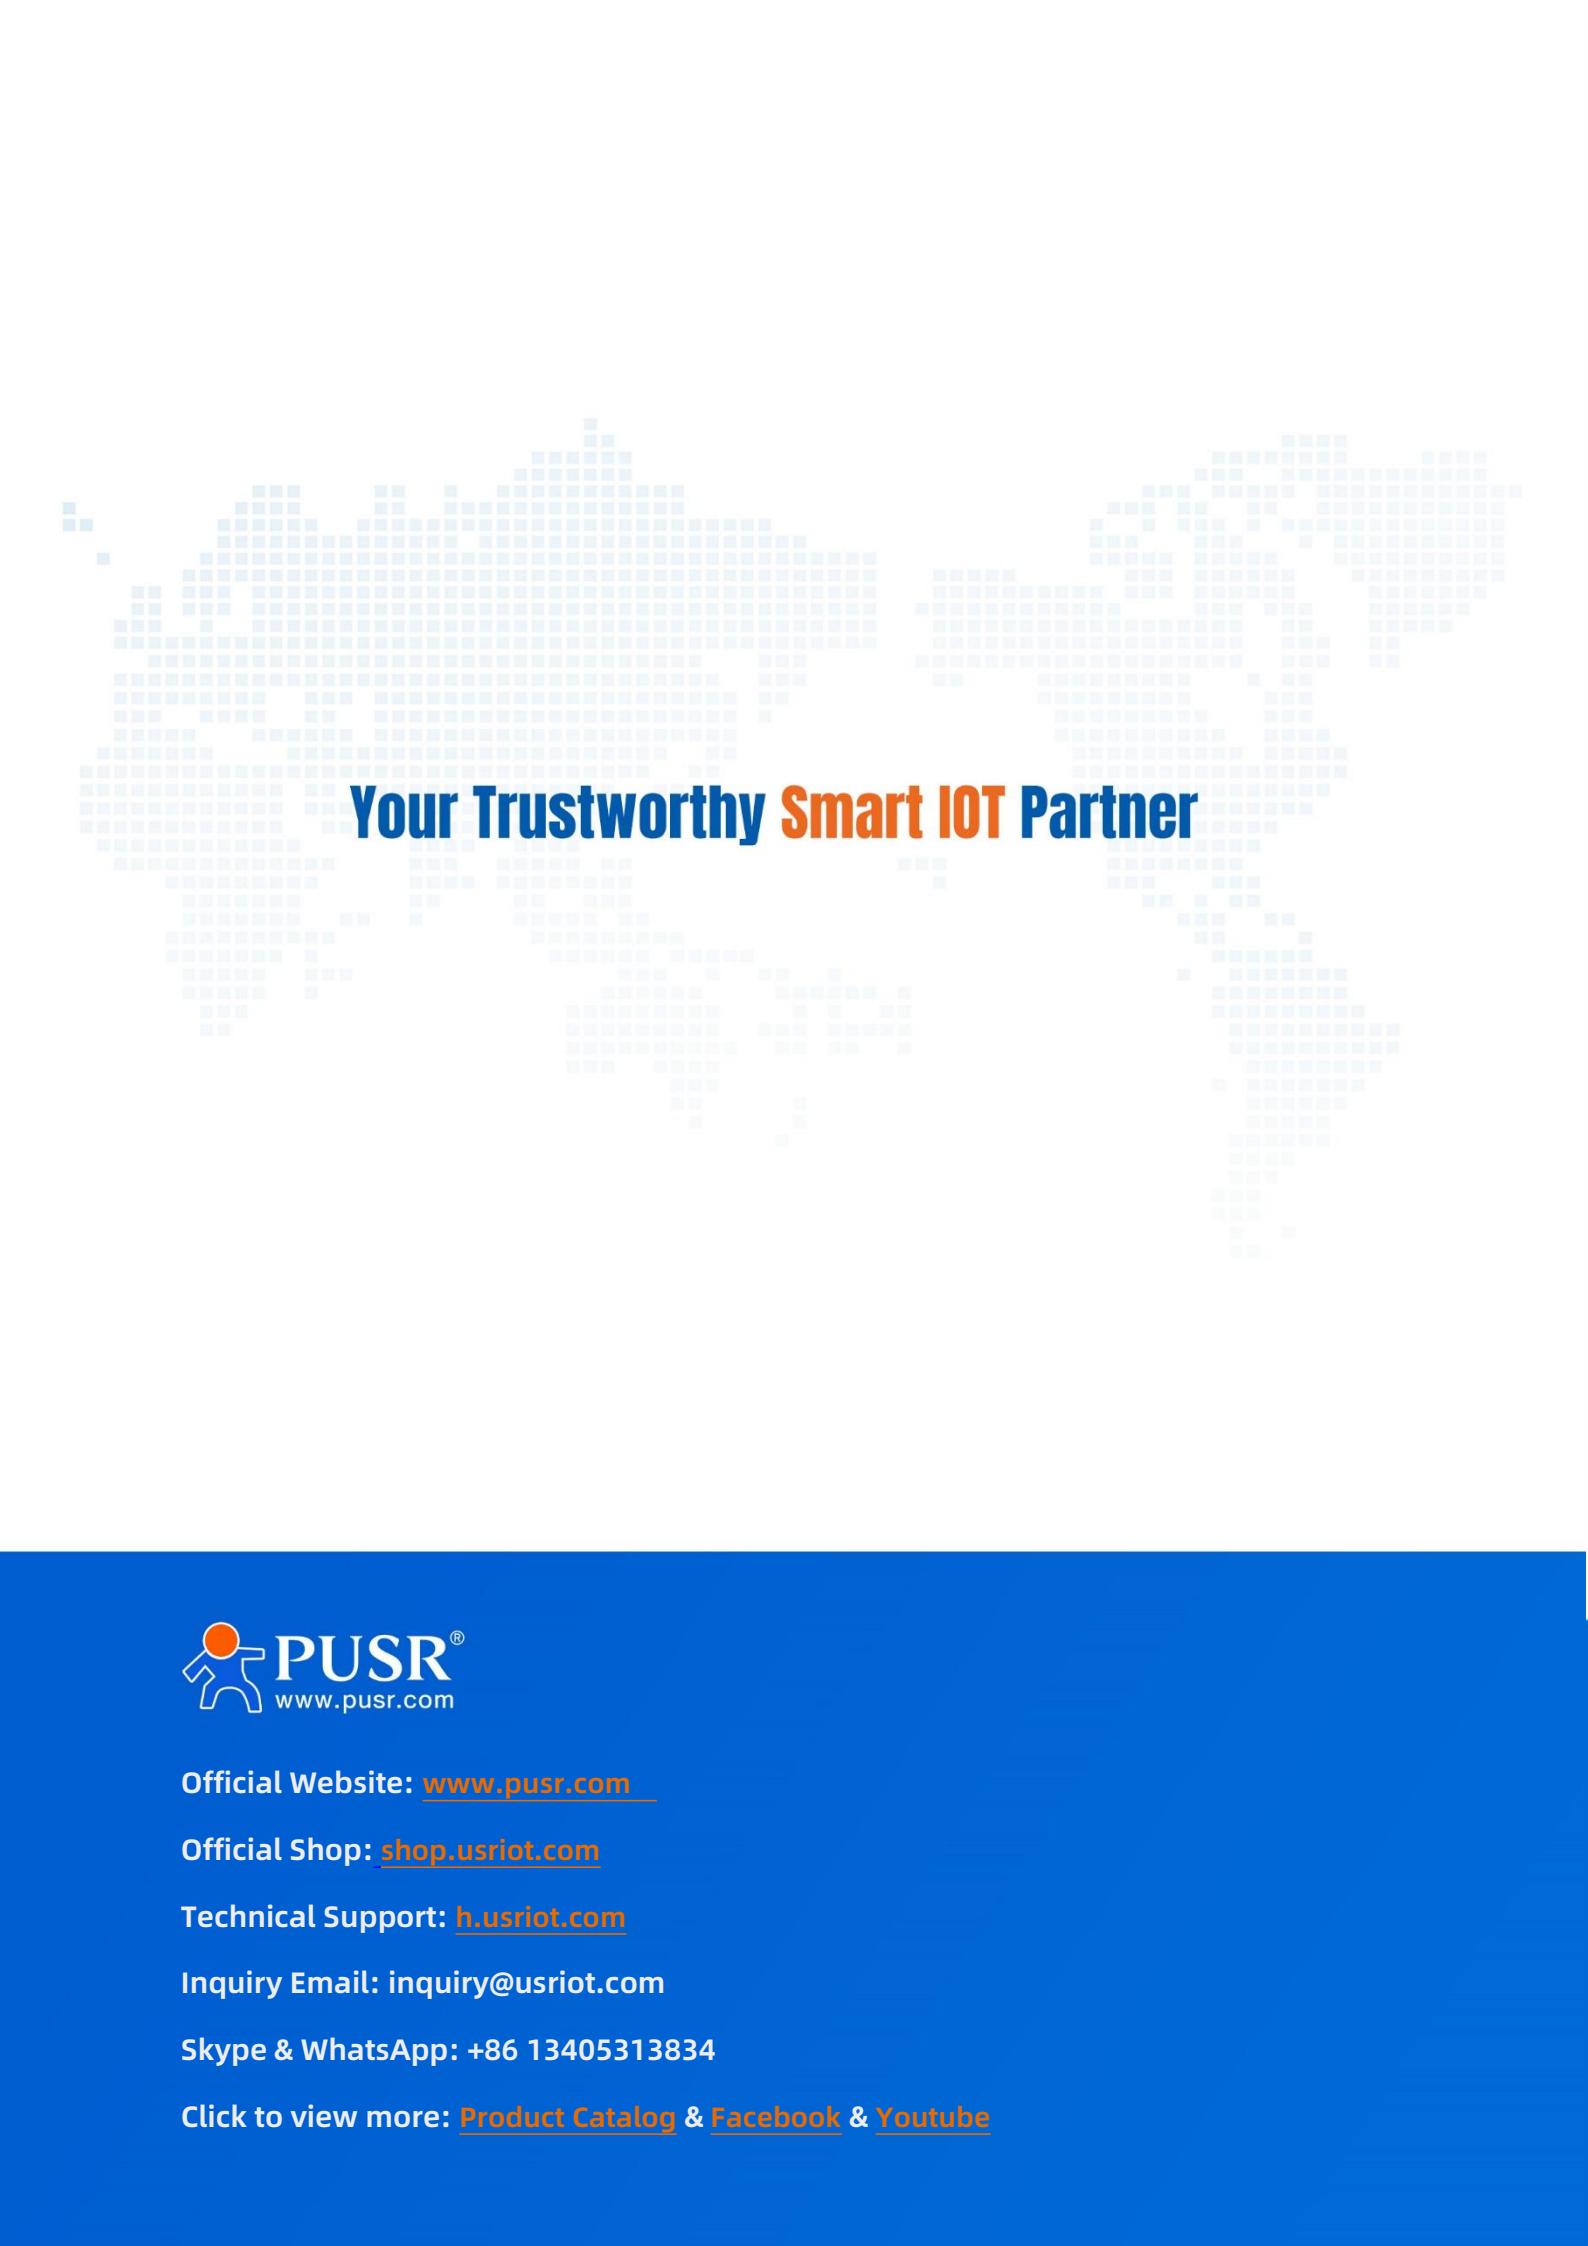

**Your Trustworthy Smart IOT Partner**



**Official Website:** [www.pusr.com](http://www.pusr.com)

**Official Shop:** [shop.usriot.com](http://shop.usriot.com)

**Technical Support:** [h.usriot.com](http://h.usriot.com)

**Inquiry Email:** [inquiry@usriot.com](mailto:inquiry@usriot.com)

**Skype & WhatsApp:** +86 13405313834

**Click to view more:** [\*\*Product Catalog\*\*](#) & [\*\*Facebook\*\*](#) & [\*\*Youtube\*\*](#)